

ON-BOARD PROGRAMMING

ON-BOARD
PROGRAM

28

NISSAN



TRANSPONDER PROGRAMS SEPARATELY FROM RKE W/ A DIAGNOSTIC TOOL

1. Sit in car with doors and windows closed.
2. Lock doors with power door lock switch on driver's door.
3. Put in and pull out key from ignition approx. 8 times or until you see the hazard/turn signal lights flash.(older models lights may flash after 4 or 5 times) you need to do that in less than 10 sec
4. When hazard lights flash (on 2005 and newer models the gauge needles may jump a little instead), put key in ignition and turn to the acc position. (when your hazard lights flash your car is sending a signal to be received by the remote)
5. Press lock button on the new remote, lights should flash again. If you have 2 remotes, 1 new and 1 old or 2 new ones, please continue with steps 6 and 7. If not, skip to end.
6. Press unlock button on driver's door, then lock button on driver's door, lights will again flash
7. Press lock button on 2nd new or old remote. Lights again will flash.