

ON-BOARD PROGRAMMING

ON-BOARD
PROGRAM

30

HONDA



TRANSPONDER PROGRAMS SEPARATELY FROM RKE W/ A DIAGNOSTIC TOOL

1. Within 4 seconds: Press LOCK button or UNLOCK button of first remote transmitter.
2. Within 4 seconds: Switch ignition OFF.
3. Within 4 seconds: Switch ignition ON.
4. Repeat procedure above twice.
5. Within 4 seconds: Press LOCK button or UNLOCK button of first remote transmitter. System should now lock and unlock vehicle to indicate remote programming mode activated.
6. Within 10 seconds:
Press LOCK button or UNLOCK button of first remote transmitter, allowing doors to lock and unlock once. Press LOCK button or UNLOCK button of each remaining remote transmitter to be programmed, allowing doors to lock and unlock once as each remote transmitter is programmed.
7. Switch ignition OFF.
8. Remove key.