



1. Turn ignition switch to ON (II)
2. Press the LOCK or UNLOCK button on one of the remotes. (An unprogrammed remote can be used for this step.)
3. Turn ignition switch to ACCESSORY (I) or LOCK (O)
4. Turn ignition switch to ON (II)
5. Press the LOCK or UNLOCK button on one of the remotes.
6. Turn ignition switch to ACCESSORY (I) or LOCK (O)
7. Turn ignition switch to ON (II)
8. Press the LOCK or UNLOCK button on one of the remotes.
9. Turn ignition switch to ACCESSORY (I) or LOCK (O)
10. Turn ignition switch to ON (II)
11. Press the LOCK or UNLOCK button the same remote. Make sure the power door locks cycle to confirm you are in programming mode.
12. Press the LOCK or UNLOCK button on each remote you want to program. Make sure door locks cycle after you push each remote button to confirm system has accepted the remote.
13. Turn the ignition switch to LOCK (O) to exit programming mode.
14. Test remote(s)