

ON-BOARD PROGRAMMING

ON-BOARD
PROGRAM

34

TOYOTA



TRANSPONDER PROGRAMS SEPARATELY FROM RKE W/ A DIAGNOSTIC TOOL

1. Start with the key out of the ignition, driver's door is open, all other doors and trunk closed and driver's door is unlocked.
2. Perform these steps within 5 seconds. A. Insert the key into the ignition (Do NOT Turn it) and Pull key out. B. Insert the key into the ignition (Do NOT Turn it) and Pull key out.
3. Perform these steps within 40 seconds. A. Close then open the driver's door. B. Close then open the driver's door. C. Insert the key into the ignition (Do NOT Turn it) and Pull key out.
4. Perform these steps within 40 seconds. A. Close then open the driver's door. B. Close then open the driver's door. C. Insert the key into ignition and leave it in the ignition. D. Close the driver's door. E. Turn the ignition to ON (Do NOT Start or crank engine) then back to OFF. F. Remove the key from the ignition.
5. Within 3 seconds, the power door locks should lock then unlock automatically indicating successful entry into programming mode. Return to step 1 if the door locks do not cycle at this point.
6. Perform these steps within 40 seconds. A. Press the lock and unlock buttons on the remote simultaneously for 1.5 seconds. B. Immediately after letting go of the lock and unlock buttons, Press the lock button by itself and hold for 2 seconds. Within 3 seconds, the door locks should lock and then unlock once indicating successful programming. If the door locks cycle twice, repeat steps A and B in step 6 as the remote was not accepted. C. Repeat steps A and B in step 6 for each new remote.
7. Open driver's door. Test all remotes. Programming is complete.