

ON-BOARD PROGRAMMING

ON-BOARD
PROGRAM

35

TOYOTA



1. Start with key out of the ignition, open and unlock driver's door and be sure all other doors and trunk are closed.
2. Insert key into ignition (Do not turn) and pull it out.
3. Perform these steps within 40 seconds. A. Using the power door lock rocker switch on driver's door perform 5 lock/unlock cycles starting with lock. Use an even pace and try to go about one cycle per second. (1 cycle = 1 lock and 1 unlock.)
4. Close, then open driver's door.
5. Perform these steps within 40 seconds. A. Using the power door lock rocker switch on driver's door perform 5 lock/unlock cycles starting with lock. Use an even pace and try to go about one cycle per second. (1 cycle = 1 lock and 1 unlock.) B. Insert the key in the ignition cylinder. C. Turn the ignition to ON (Just shy of starting car, Do NOT Start) then back to OFF. D. Turn the ignition to ON (Just shy of starting car, Do NOT Start) then back to OFF. E. Remove the key from the ignition.
6. Within 3 seconds the power door locks should cycle automatically indicating successful entry into programming mode. Return to step 1 if the locks do not cycle at this point, if they do cycle then continue to step 7.
7. Perform these steps within 40 seconds. A. Press the lock button on the remote for 1 second. B. Now press the lock button by itself and hold for 2 seconds. Within 3 seconds the door locks should cycle once indicating successful programming. If the door locks don't cycle or cycle twice, repeat steps A and B, your remote has not been accepted. C. Repeat steps A and B in step 7 for each new transmitter.
8. Close driver's door. Test all remotes. Programming is complete.