

# ON-BOARD PROGRAMMING

**ON-BOARD  
PROGRAM**

**5**

EXCEPT MITSUBISHI BASED CHRYSLER VEHICLES  
1998+ CHRYSLER, DODGE  
1999+ JEEP



## **ADD KEY (Must have two working Sentry Keys):**

1. Put one of the two current keys into the ignition and turn to the ON position.
2. After the key has been in the ON position for at least three seconds — but no more than 15 seconds — turn the key back to the OFF position.
3. Take the key out and put in the second current key, turning it to the ON position, all within 15 seconds. The second key cannot be the same as the first key.
4. After ten seconds, a theft alarm light will illuminate and a single chime will sound. This confirms entry into “Customer Programming Mode”.
5. Within 60 seconds, turn key OFF and remove the current key.
6. Put a new key into the ignition and turn to the ON position.
7. After ten seconds, a single chime will sound. The theft alarm light will turn off. Wait three seconds and turn key OFF.
8. Repeat these steps for additional keys.