## **ON-BOARD PROGRAMMING**

## ON-BOARD 32 HONDA



## TRANSPONDER PROGRAMS SEPARATELY FROM RKE W/ A DIAGNOSTIC TOOL ORIGINAL KEY MUST HAVE AN "L" ON THE BLADE

- ENTER the vehicle and CLOSE all doors. (Each of the following steps must be completed within five seconds of one another. If you take longer than five seconds between steps or make a mistake, you must start the entire procedure over.)
- 2. INSERT the key into the Ignition, HOLD one remote in your left hand with additional remotes close by.
- 3. PERFORM each of the next three (3) steps in order, then repeat all three (3) steps two (2) more times for a total of three (3) times each.
- 4. TURN the Ignition to the ON position, marked "II" on the Ignition.
- 5. PRESS the LOCK button on the remote.
- 6. TURN the Ignition to the LOCK position, marked "0" on the Ignition. (REPEAT Steps 4-6 two (2) more times)
- 7. TURN the Ignition to the ON position, marked "II" on the Ignition.
- 8. PRESS the LOCK button on the remote, the door locks should cycle indicating the vehicle has ENTERED Programming Mode.
- 9. Within five (5) seconds of entering Programming Mode, PRESS the LOCK button again on the same remote. The door locks should cycle again indicating the vehicle has successfully PROGRAMMED that remote.
- 10. For programming additional remotes to your vehicle, REPEAT Step 9 with each additional remote one after another. Step 9 must be completed within five (5) seconds for each additional remote. You may program up to three (3) remotes to your vehicle.
- 11. TURN the ignition to the LOCK position, marked "0" on the Ignition to EXIT Programming Mode.
- 12. Test all remotes. Programming is now complete.