

INDEX

Key Detail
Depth & Spacing Detail
Tumbler Detail
Caps-N-Shutters
Coding Instructions
Ignitions
A) Module Ignition
B) Tilt (Saginaw, Pivot Design)
Doors 8
A) Pawl-n-Parts
Rear Compartment & Tailgate
Cone Locks
Glove & Seat Back

1994 Chrysler

CHRYSLER BODY CHART

	PLYMOUTH	DODGE	CHRYSLER	EAGLE	
Α	Acclaim	Spirit	Lebaron Landau (4 dr)		
В		Full Size Van			
BR		T-300			
J			Lebaron Coupe & Convertible		
LH		Intrepid	Concorde New Yorker 207	Vision	
N	- 1	Dakota	54.		
P	Sundance	Shadow		. 4.	
PL	Neon	Neon	20		
S	Voyager	Caravan-Mini Ram Van	1		
SR	Viper				


In 1994 Chrysler has improved security in their Double-Bitted locking system. All 1994 vehicles will utilize a new key groove (84 primary, 85 valet), the change in key groove will initiate a keyway restricted valet system and new L-Series codes.

To continue giving your customers the quality service they're use to, the following should be noted when servicing the 1994 vehicles:

- Some new component parts have been added to the line, old component parts remain unchanged. (Tumblers, Caps, Shutters, Springs, Pawls, Shafts)
- New lock service packages will be required for ignitions and decks I/P and seat backs.

In fall 1993 Chrysler introduced its new PL vehicle (Plymouth Neon, Dodge Neon). These vehicles have the security change mentioned above and also are equipped with a new module style ignition. In the following pages you will find all service components and instructions needed to service all 1994 Chrysler locks.


KEY DETAIL

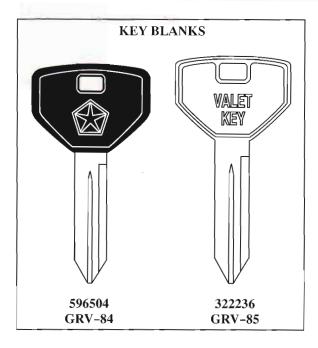

- 1.) Keys are double sided and reversible.
- 2.) Single key operation using a master/valet function.
- 3.) Code Series:
 - A. The "L" codes will not be stamped on any of the locks.
 - B. A plastic bag with a bar coded paper label will accompany the car to the dealership.
- 4.) Please note that the X59 key cutting card **should not** be used when cutting the "L" codes. Please use X60 card.


KEY CODE	KEY BITTING	IGNITION	DOOR/DECK	TWIST I/P	I/P & SEATBACK
L0305	1244311	1244311	44311	4311	311
L0306	4332431	4332431	32431	2431	431
L0307	4344332	4344332	44332	4332	332
L0308	4311331	4311331	11331	1331	331
L0309	4422121	4422121	22121	2121	121
	3223431	3223431	23431	3431	
		1232131	32131	1	_
		222			

DEPTH AND SPACING DETAIL

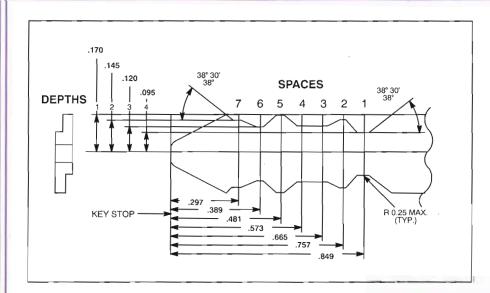

- 1.) The key is gauged from the tip of the key.
- 2.) Codes are listed bow to tip.
- 3.) Keys use 7 cuts and 4 depths.

TUMBLER DETAIL

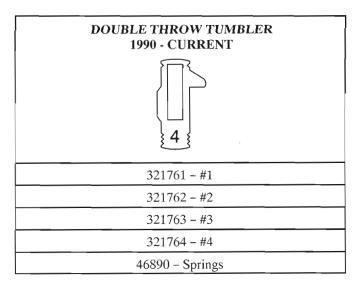


- 1.) Four tumblers are used that correspond to key cuts. 4 depths = 4 corresponding tumblers.
- 2.) All tumblers have numbers stamped on them.
- 3.) Tumblers are snap-in design.

IMPORTANT: Single Throw and double Throw Tumblers are **NOT** interchangeable. Use only with appropriate design.

CAPS-N-SHUTTERS


	SNAP CAP DOORS	SNAP CAP ILLUMINATED	SMALL CASE CAP DOORS & CONE LOCKS	LARGE CASE CAP REAR COMPT. LOCKS	UNIT SHUTTERS ALL	SHUTTER SPRINGS ALL	ZINC CASE CAP REAR COMP.
CHROME	321504	321830	321847	321709	594753	WW 46766	311446
BLACK	321576		321848	321710	594391	WW 46766	
SATIN BLACK			322304				

CODING INSTRUCTIONS

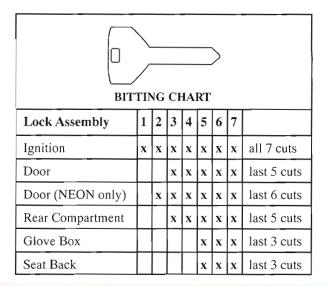


- 1.) Determine bitting of the MASTER KEY from code book or key.
- 2.) From the bitting chart, determine tumbler positions required for lock service.
- 3.) Install appropriate springs and tumblers.
- 4.) Snap into place.
- 5.) Test with MASTER key.


IGNITIONS

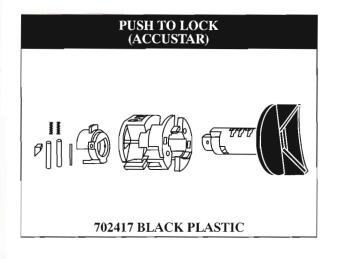

- 1.) Tumbler positions required 1 2 3 4 5 6 7.
- 2.) Sub-assemble detent pins & springs into housing assembly set aside (face-up).
- 3.) See coding instructions.
- 4.) Insert buzzer actuator into lock cylinder with angled side towards the cylinder knob.
- 5.) Insert key into cylinder (slowly).
- 6.) Assembly
 - A. Hold lock cylinder with buzzer actuator on top in right hand.
 - B. Hold lock case with buzzer tab on top in left hand.
 - C. With buzzer actuator & buzzer tab aligned, slide lock cylinder into case until it stops (approximately 1/2 way).
 - D. Turn lock cylinder 45° counterclockwise & push in until it stops.
 - E. Turn lock cylinder 45° clockwise & push in until cylinder fully seats into lock case.
 - F. Hold cylinder knob down with thumb & remove key.
- 7.) Install driver & spirol pin.

IGNITIONS

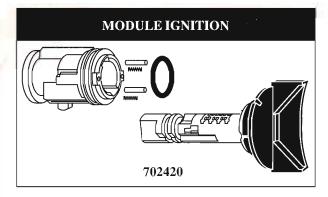


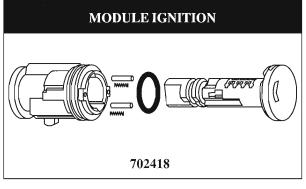

1/4

- 1.) Tumbler positions required 1 2 3 4 5 6 7.
- 2.) Slide O-ring over front of lock case. Should seat in slot right behind detent hole bosses.


- 3.) Sub-assemble springs & detent pins into lock case assembly set aside (face up).
- 4.) See Coding instructions.
- 5.) Insert buzzer actuator into lock cylinder with long end of actuator facing down. Actuator should be flush with O.D. of cylinder.
- 6.) Insert key into cylinder slowly.
- 7.) Assembly
 - A. Hold lock cylinder with buzzer actuator facing you (approximately 10 o'clock) in right hand.
 - B. Hold lock case with retainer block facing away from you in left hand.
 - C. Insert cylinder into lock case until cylinder seats against detent pins.
 - D. Turn cylinder 45° clockwise.
 - E Turn key to run position, depress retainer block and insert into ignition module.

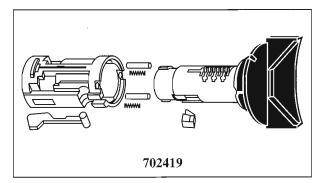

- 1.) Tumbler positions required 1 2 3 4 5 6 7.
- 2.) See coding instructions.
- 3.) Slide buzzer actuator lever into lock case. Lever tip should protrude out from lock case.

- 4.) Sub-assemble springs & detent pins into housing assembly set aside (face up).
- 5.) Insert buzzer actuator into lock cylinder. <u>Actuator can only be installed one way.</u>
- 6.) Insert key into cylinder slowly.
- 7.) Assembly
 - A. Hold lock cylinder with buzzer actuator facing you (approximately 10 o'clock) in right hand.
 - B. Hold lock case with buzzer actuator lever facing you (approximately 10 o'clock) in left hand.
 - C. Insert cylinder & key into lock case.
 - D. When cylinder is fully seated against detent pins, turn cylinder in the clockwise direction.


DOORS

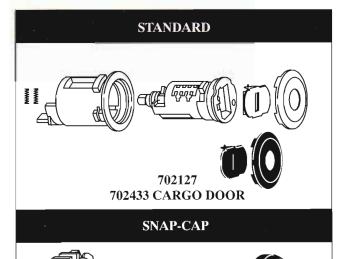

702143 A 702429 CARGO DOOR 702133 Illuminated 702498 NEON <u>ONLY</u>


- 1.) Tumbler positions required 1 2 3 4 5.
- 2.) See coding instructions.
- 3.) Install cylinder into lock case. (Note: Place return spring cavity in alignment with drain hole.)
- 4.) Place shutter springs 7 unit shutter on cylinder face and snap or stake on case cap.
- 5.) Install double-acting return spring.
- 6.) Install universal lock pawl & E-Clip for right hand or left hand application.

PAWLS-N-PARTS

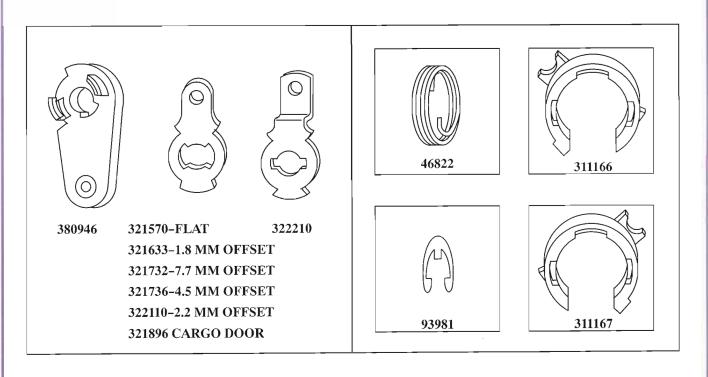


REAR COMPARTMENT & TAILGATE

STANDARD W/LEVER

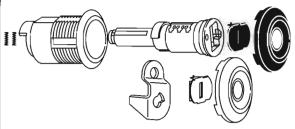

702421

STANDARD W/SHAFT

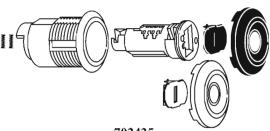

702425




320930 VIPER



322074 VISION



322102 INTREPID

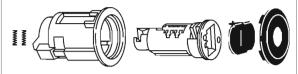


702422

- 1.) Tumbler positions required 3 4 5 6 7.
- 2.) See coding instructions.
- 3.) Hold lock case with drain hole at 6 o'clock. Insert cylinder & key into case with return spring groove at 3 o'clock.
- 4.) Turn cylinder counterclockwise until it stops & remove key.
- 5.) Place shutter springs & unit shutter on cylinder face & stake on case cap.
- 6.) Install lock cylinder into cone housing (if applicable).
- 7.) Install return spring.




8.) Install lever or shaft.

NEW YORKER 702427

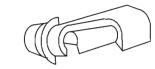

380942

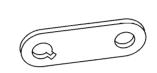







46948

CONE LOCKS

SUNDANCE AND SHADOW

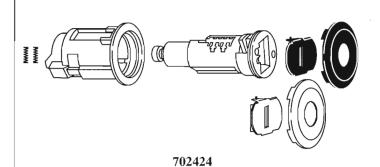


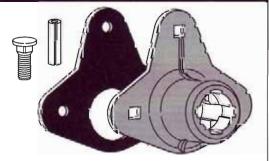


701241


CONE LOCKS (Cont'd.)

NEON 702422

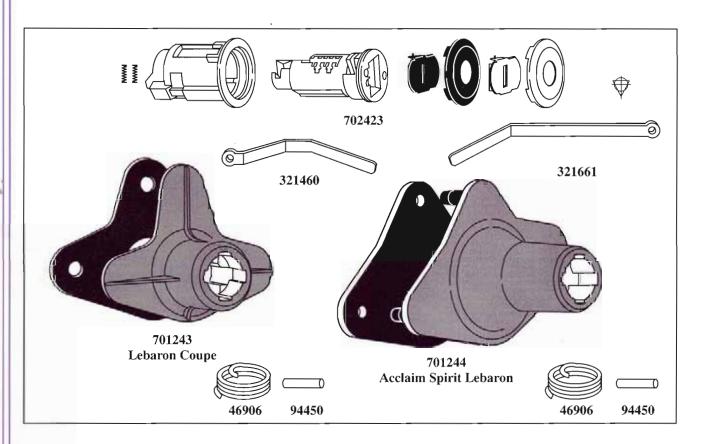

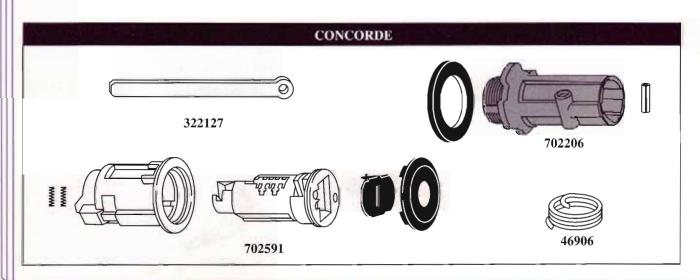

GLOVE - SEAT BACK

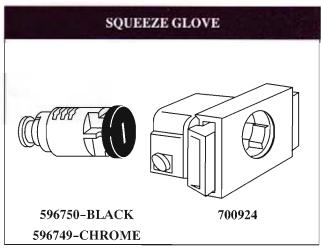

Remove cylinder by spreading the two tabs on the back side of the squeeze latch.


PADDLE GLOVE	SEAT BACK
596742	
596742	
596751 INTREPID CONCORDE VISION	
NEW YORKER	596755

Remove cylinder by depressing retainer on the back of the cylinder recode and reinstall.

NOTE: All new Glove and Seat Back Cylinders will use Double Throw Tumblers, even though all tumblers are located on one side of the cylinder.

- 1.) Tumbler positions required 5 6 7.
- 2.) See coding instructions.

COMPLETE SERVICE KIT B&S PART #701417

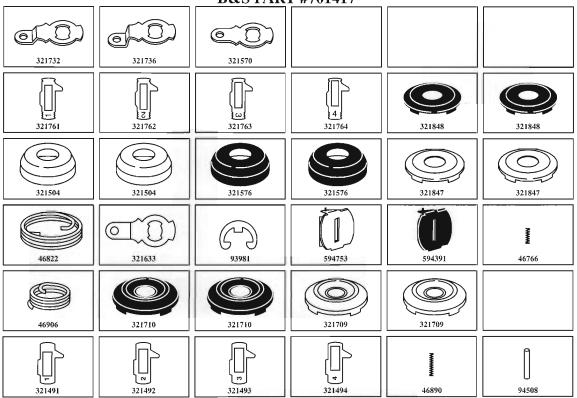

NOTE: IF YOU HAVE ALREADY PURCHASED A 700918 SERVICE KIT, SIMPLY ORDER UPDATE KIT #701416 TO RECEIVE ALL THE NEW PARTS. (700918 & 701416=701417)

ALL PARTS MAYBE ORDERED INDIVIDUALLY-FOR REFILL PURPOSES