

ON-BOARD PROGRAMMING

**ON-BOARD
PROGRAM**

22

TOYOTA 2001-2009



CAMRY 2002-2006, CELICA 2000-2005,
COROLLA 2003-2008, ECHO 2000-2005, FJ CRUISER 2006-2008,
HIGHLANDER 2001-2007, MATRIX 2003-2008, 4RUNNER 2003-2009,
PRIUS 2000-2003, RAV4 2001-2005, PONTIAC VIBE 2003-2008

1. Start with key out of ignition, driver's door is open all others closed and driver's door unlocked.
2. Perform these steps within 5 seconds.
 - a. Insert key into the ignition (Do NOT Turn). Pull key out.
 - b. Insert key into the ignition (Do NOT Turn). Pull key out.
3. Perform these steps within 40 seconds.
 - a. Close, then open the driver's door.
 - b. Close, then open the driver's door.
 - c. Insert the key into the ignition (Do NOT Turn). Pull key out.
4. Perform these steps within 40 seconds.
 - a. Close, then open the driver's door.
 - b. Close, then open the driver's door
 - c. Insert the key into ignition and leave it in ignition.
 - d. Close the driver's door.
 - e. Turn ignition to ON (Do NOT Start) then back to OFF.
 - f. Remove the key from the ignition.
5. Within 3 seconds the power door locks should cycle automatically indicating successful entry into programming mode. Return to step 1 if the locks do not cycle at this point.
6. Perform these steps within 40 seconds.
 - a. Press the lock and unlock buttons on the remote simultaneously for 1.5 seconds.
 - b. Immediately after letting go of the lock and unlock buttons, press the lock button itself and hold for 2 seconds. Within 3 seconds, the door locks should cycle once indicating successful programming. If the door locks cycle twice, repeat steps A and B in step 6 as the remote has not been accepted.
 - c. Repeat steps A and B in step 6 for each new remote.
7. Open driver's door.